

Required hardware




Available software

1. Integrated batocera nfc service
2. Zaparoo nfc service

The integrated batocera nfc service supports only pn532 readers. The Zaparoo nfc service supports more hardware (see <https://zaparoo.org>)

Installation


Plug the nfc reader to batocera

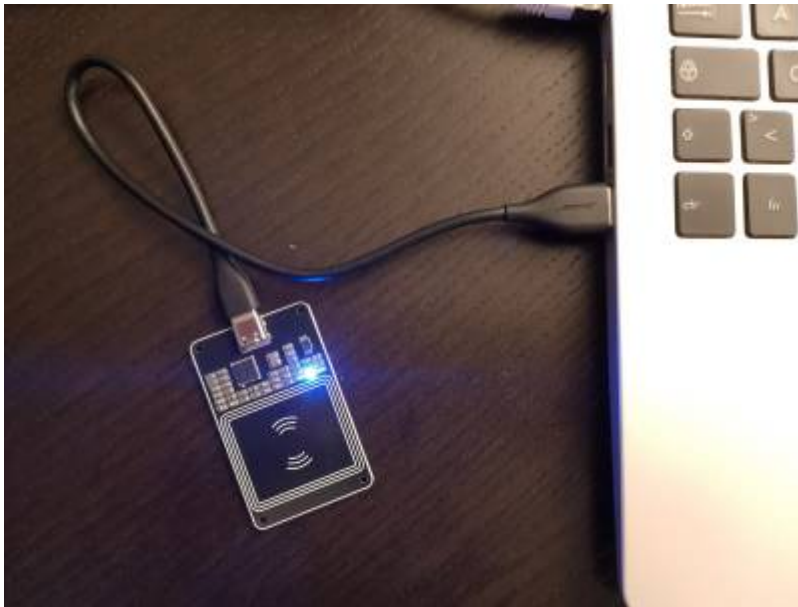

Start the nfc service



Write the name of a card on a nfc tag

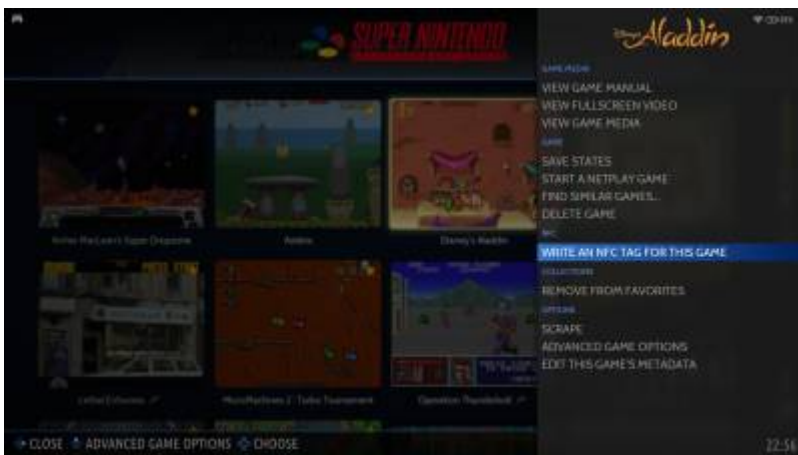



Usage

From:

<https://www.wiki.batocera.org/> - **Batocera.linux** - Wiki

Permanent link:

<https://www.wiki.batocera.org/hardware:nfc?rev=1770330868>

Last update: **2026/02/05 22:34**

