



# Using External Storage with Batocera

To change the storage device from INTERNAL (the drive Batocera has been flashed to) to EXTERNAL (another drive connected to the machine), follow these steps:

1. Open the **Main Menu** with [START] and navigate to **SYSTEM SETTINGS** → **STORAGE DEVICE**.

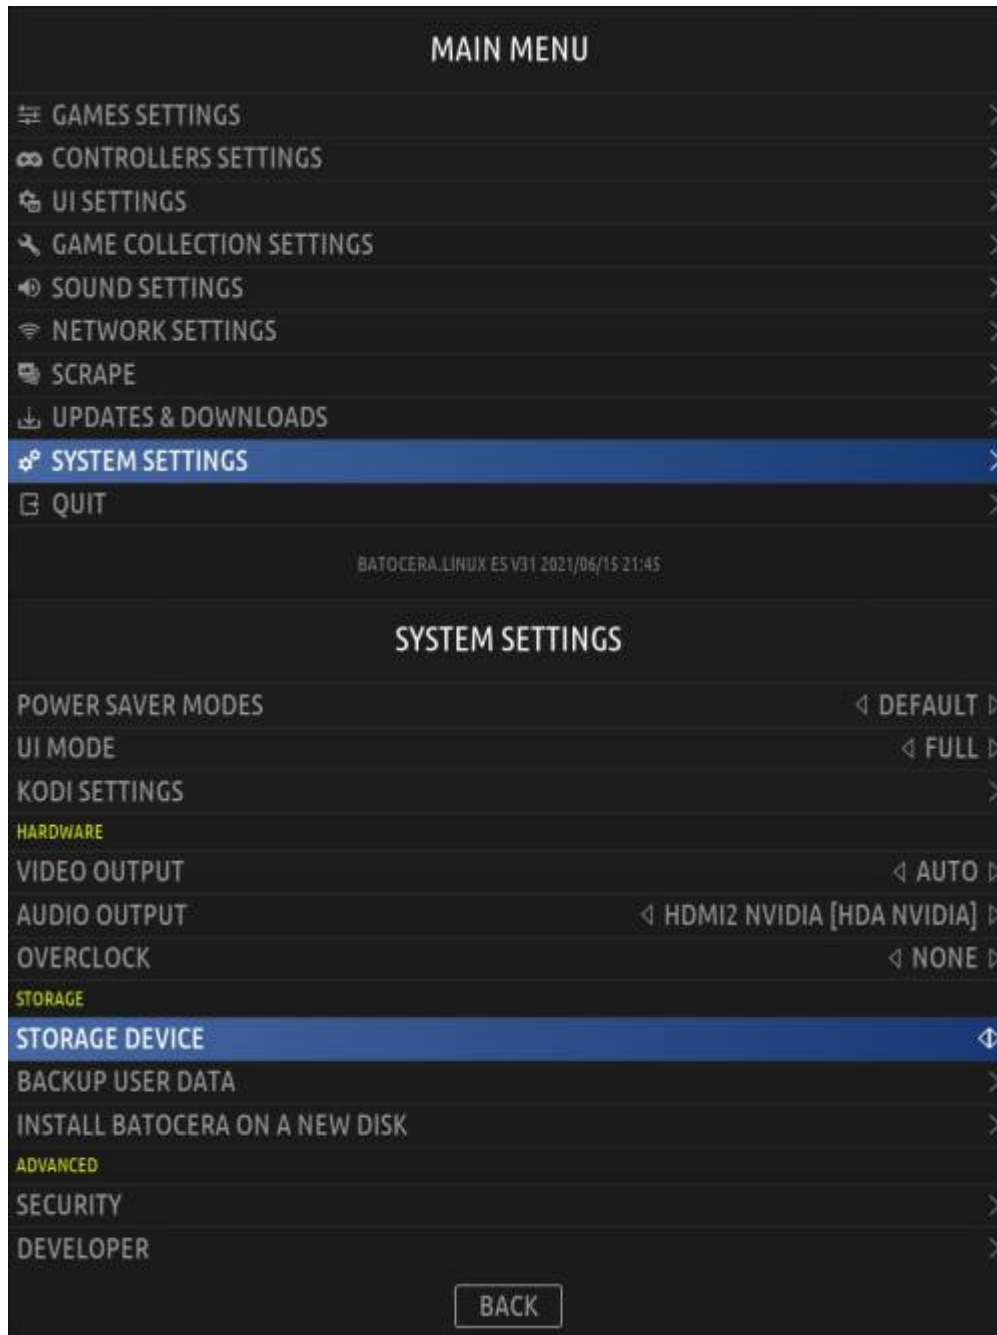

2. Select the storage device. Selecting "AnyExternal" will use the first external storage device that connects. How does your system decide what the first external storage device is when there is more than one connected? I'd like to know too.

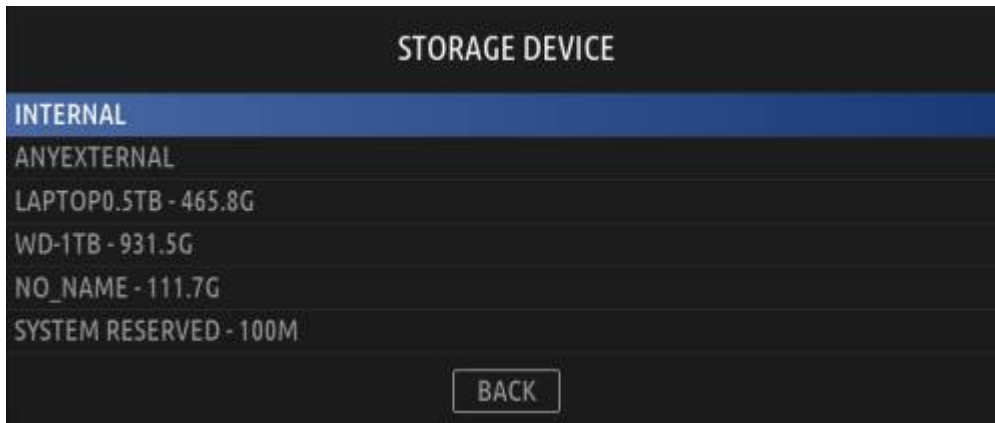

In most cases, using a second USB hard drive to host your ROMs separately from the Batocera system should be completely transparent when this method is used to enable it. According to Batocera, it will just appear as if though the roms folder on your external drive is actually on your /userdata partition.



Batocera will automatically create the folder structure it needs on the drive you select.

Batocera has a built-in tools to format drives. **BE ULTRA CAREFUL WHEN USING THIS, AS YOU CAN DESTROY ALL DATA WITH IT!** You can prepare the drive in [the right format](#) by using **MAIN MENU → SYSTEM SETTINGS → DEVELOPER → FORMAT A DISK.**

However, when tinkering with the systems, things can go wrong. The following is here to help you troubleshoot and fix those cases.

## Manual configuration with batocera-boot.conf (advanced)

In case the above isn't sufficient, or you'd like to use individual folders for each part of userdata, the "DEVICE" storage type can offer extended functionality.



The [NAS](#) page contains more information on the syntax.

1. [Open](#) /boot/batocera-boot.conf
2. Set sharedevice to DEVICES
3. Add a new line containing sharedevice\_part1=
4. Add the appropriate keyword followed by an @ character (eg. SHARE@ or ROMS@, [full list of keywords here](#))
5. Add the UUID of the drive containing the folder (eg. sharedevice\_part1=SHARE@12e46ca9-xxxx-xxxx-xxxx-xxxxxxxxxxx)
6. If not using the root of the drive, append a : and then add the folder path (eg. sharedevice\_part1=ROMS@2efa1068-yyyy-yyyy-yyyy-

```
yyyyyyyyyy:/Documents/roms)
```

7. Add up to ten parts as needed.

These can also be combined to have individual keywords bound to individual folders. For example:

```
sharedevice=DEVICES
sharedevice_part1=SHARE@12e46ca9-xxxx-xxxx-xxxx-xxxxxxxxxx
sharedevice_part2=ROMS@2efa1068-yyyy-yyyy-yyyy-yyyyyyyyyy:/Documents/roms
```

## DEV MODE

If the above steps aren't sufficient for your purposes, you can set up the external drive manually. This will be done by editing the `/boot/batocera-boot.conf` file in the [boot partition](#) and providing the information of the partition that hosts the ROMs.

The list of UUIDs of all drives connected to the system can be printed with the `blkid` [command](#). It will output something similar to the following:

```
/dev/sdb2: LABEL="SHARE" UUID="12e46ca9-xxxx-xxxx-xxxx-xxxxxxxxxx"
TYPE="ext4"
/dev/sdb1: LABEL="BATOCERA" UUID="zzzz-zzzz" TYPE="vfat"
/dev/sda1: LABEL="SHARE" UUID="2efa1068-yyyy-yyyy-yyyy-yyyyyyyyyy"
TYPE="ext4"
```

In this example, `/dev/sda1` is the partition on the drive hosting my ROM files. `/dev/sdb1` is the Batocera boot partition and `/dev/sdb2` is the rest of the Batocera USB pendrive (that I don't want to use).

Open the `/boot/batocera-boot.conf` file. Change the `sharedevice` to `DEV` [UUID of the desired partition]. For example:

```
sharedevice=INTERNAL
```

would be replaced with

```
sharedevice=DEV 2efa1068-yyyy-yyyy-yyyy-yyyyyyyyyy
```

If the drive is empty, the folder structure for the ROM files will be created on next reboot.

If you are using an external hard drive and it is not recognized correctly after doing this, then it might be that your external hard drive needs more time to spin up while Batocera boots. In those cases you have to edit the `/boot/batocera-boot.conf` file and add the line: `sharewait=15` underneath the aforementioned line (if it still does not work, try with a higher number like `sharewait=20` for example).

Last update: 2022/09/29 09:13 store\_games\_on\_a\_second\_usb\_sata\_drive [https://www.wiki.batocera.org/store\\_games\\_on\\_a\\_second\\_usb\\_sata\\_drive?rev=1664442832](https://www.wiki.batocera.org/store_games_on_a_second_usb_sata_drive?rev=1664442832)

---

From: <https://www.wiki.batocera.org/> - **Batocera.linux - Wiki**

Permanent link: [https://www.wiki.batocera.org/store\\_games\\_on\\_a\\_second\\_usb\\_sata\\_drive?rev=1664442832](https://www.wiki.batocera.org/store_games_on_a_second_usb_sata_drive?rev=1664442832)

Last update: **2022/09/29 09:13**

