



Commodore 64

The Commodore 64 is a computer developed by Commodore. It was released in 1982 and there is still active game development happening. There are several hardware revisions and even a cartridge-based console version, but the internals are nearly identical. The CPU is a 1 MHz 6502-variant, but the main features are a special video chip (the VIC-II) and a famous soundchip (the SID) which is still used by chiptune makers today. Emulating the SID takes a lot more system resources than the rest of the C64 due to its analog modulation features. The C64 was especially popular in Germany, Scandinavia and the USA. There are more than 20.000 known games for the C64 and several thousand of these were sold professionally.

This system scrapes metadata for the c64 group(s) and loads the c64 set from the currently selected theme, if available.

Grouped with the C64 group of systems. There are two (lesser known) variants that can be chosen for specific games, the C64 DTV and the C64 SCPU. Please see the respective sections.



Quick reference

Emulators	Accepted ROM formats
LIBRETRO: VICE X64 (Default)	.prg .crt .tap .t64 .d64 .d81 .m3u .zip .7z
VICE: X64	.prg .crt .tap .t64 .d64 .d81
VICE: X64DTV	.prg .crt .tap .t64 .d64 .d81
VICE: XSCPU64	.prg .crt .tap .t64 .d64 .d81

- **Folder:** All games for all variants go into `roms/c64/`. You can create subfolders for Multi-Disk-Games.
- **Accepted ROM formats:** `.prg .crt .tap .t64 .d64 .d81 .m3u .zip .7z`
As games for the C64 can come in many variants including Cartridge, Disk or Tape, please see the [ROMs](#) topic below if you are unfamiliar with these formats.
- **BIOS files:** Batocera V33 comes with all required BIOS files.
- **BIOS required?** No
- **Configuration via:** EmulationStation for RetroArch; Internal menus for standalone emulators

ROMs

Games for the C64 basically can come in three different physical formats (Cartridge, Tape, Disk) and each of those can have different filetypes. Also games can be loaded as a program, bypassing any emulated physical media. Therefore this section is more detailed than with other systems.


Programs (.prg)

A “program” is a C64 executable file that you would LOAD and then RUN on a real C64. Using it with an emulator usually bypasses the loading process, injecting the file directly into the memory, and then automatically runs it (so there is no tape, disc or cartridge inserted). Emulators can also run programs that could not work on a real C64 because they use memory that can not be accessed during the real loading process. The most famous example is the “Oneload” collection of C64 games, which are very emulator friendly as they bypass all loading and unpacking times.

Most PRGs are “crunched”, meaning they have been optimized to use the least possible amount of disk space in order to fit more games on one disk or reduce loading times. Decrunching usually takes up to 20 seconds and is identified by wildly flickering color bars in the border area.

Cartridges (.crt)

The C64 has a cartridge port and .crt files emulate these cartridges. In the early days of the C64, commercial games were released on cartridges that are usually 8KB or 16KB in size. Late in the eighties developers created cartridges that could store up to a megabyte of data via bank switching. The emulators in Batocera support nearly all these formats automatically. There are a few cartridges specifically produced for the obscure C64GS that will require you to set the **MODEL TYPE** to **C64 GAMES SYSTEM PAL** in the metadata for that game (not recommended for other C64 games).

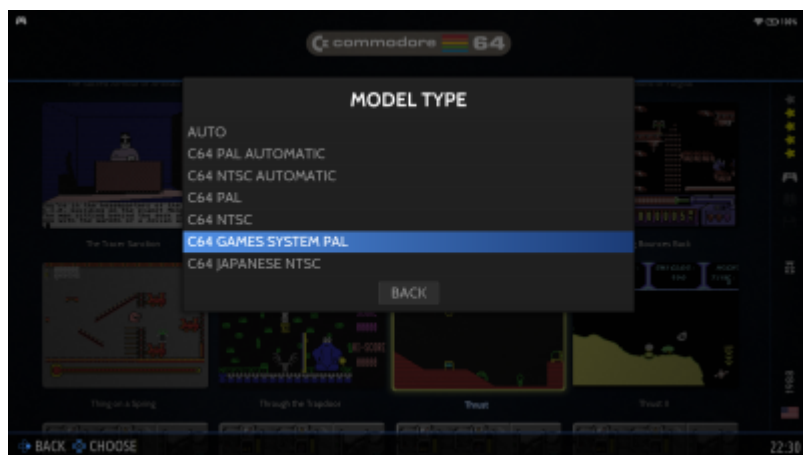

A lot of popular disk based games have been hacked into cartridge games (and as of November 2021 there still is active development in this area), most often for the Easyflash3 cartridge. These modified versions usually have the shortest load times and also avoid diskette changes.

Easyflash cartridges can be modified (for example for Gamesaves) and when you properly exit the emulator, the modified cartridge is written back to the roms directory, so be advised that the checksums of .crt files can change when you play them.

There are also several utility cartridges which contain fast loaders or “freezers” can can snapshot a game while it is running. As this functionality usually is provided by the emulators, Batocera has no configuration to insert a utility cartridge and then load a game.

This is possible with the stand alone emulators (VICE: X64) by entering their main menu via [Start] then entering the menu **Cartridge** and then **Attach CRT image**. Then **Set current cartridge as default** and back to the main menu, **Settings Management** and finally **Save current settings**.



In LIBRETRO: VICE X64 you need to enter the RetroArch Menu ([H0TKEY] + ) , then **Options** → **Media Options** → **Cartridge**. Remember to save the options.

Tapes (.tap, .t64)

Loading from tapes is a long process and if you want the full experience, there are .tap images for many games that are representations of the audio on the tape and therefore you enjoy the same load times of several minutes for one game. As many later C64 games actually include extra music and graphics during the load, these large (several 100 KB) files are important for digital preservation. If a tape file is smaller than roughly 40KB most likely it is actually just a PRG file hiding inside a wrapper that can be loaded instantly.

For multi-load games on tape you can access a full tape emulation including a tape counter, fast forward and rewind, either by opening the Virtual Keyboard in LIBRETRO: VICE X64 (short press on [Select]) or by entering the Menu in VICE: X64 and going into the **Tape** options.

Disks (.d64, .d81)

The Commodore 64 used a separate floppy disk drive, the 1541, which in itself is a complete computer with a nearly identical CPU to the C64. The 1541 reads single sided disks with about 170 KB of contents. The data of one diskette can be stored in a .d64 file which contains the data for all the tracks and sectors as the C64 would see it, but not the full data that the 1541 would access, so .d64 files usually do not contain any information about the copy protection used. There are file formats for raw disks (for example .g64) which are not directly supported by Emulation Station but can be loaded manually in the standalone emulators if required.

Loading a .d64 file emulates inserting the disk, typing `LOAD "*" , 8 , 1` which loads the first directory entry on a disk, and then `RUN` to start the program if it is not an Autostart program (which is actually a hack overwriting stack space, the C64 had no official Autostart). For disks that contain several different programs you need to manually load the correct program by resetting the emulated machine and typing in the specific commands (please refer to C64 documentation). There is no parameter in Emulation Station to select which program to load, it will always start the first one on the inserted media.

A later disk drive, the 1581, used 3.5 inch disks with a higher capacity of 800KB. This is represented by a .d81 image. While there have been nearly no commercial games released for this drive, some games have been converted from multi-disk 1541 to single-disk 1581 versions which then require no disk changes.

By default all emulators have **Accurate Drive Emulation** turned on which emulates the full 1541 drive. This can be turned off in the RetroArch settings (not Emulation Station) to speed up disk access but this reduces compatibility especially with games on multiple disks.

Multi Disk Games (.zip, .m3u)

Many games use two sided disks or more than one disk. A two sided disk must be flipped manually on

a 1541, so you would eject the disk, flip it around and re-insert it. The standard naming convention for such disks is Disk 1 - Side A and Disk 1 - Side B, followed of course by Disk 2 - Side A and so on.

When using the LIBRETRO: VICE X64 emulator (the default), the easiest way to switch disks is to just insert all required disk images into one ZIP file. When loading this ZIP, the emulator will temporarily unzip all disks into a save folder and build an .m3u file on the fly. To switch between the disks you can use [H0TKEY] + [L2] or [R2] to go through the disks. You can also utilize RetroArch's **Disc Control** menu in the **Quick Menu** ([H0TKEY] +  button in-game, then scroll down, it's pretty low in the list). Select **Eject Disc**, then go to **Current Disc Index** and change your disk to the required one. Then, **Insert Disc** to continue the game.

Warning - this method does NOT save your progress on the disks as these are not modified inside the ZIP. You have to use Snapshots to save your in-game progress or check [Save Disks](#)

You can of course create .m3u files yourself for better naming of disks as well as saving progress inside the .d64 images. By default, RetroArch will display the filename (without extension) of each M3U entry when selecting a disk via the **Current Disc Index** drop-down menu. Custom display labels may be set for each disk using the syntax: DISK_FILE|DISK_LABEL. For example, the following M3U file:

```
Cool Game Name (1990)(Developer)(Disk 1 of 3 Side A)(Game).d64|Game
Cool Game Name (1990)(Developer)(Disk 1 of 3 Side B)(Surface).d64|Surface
Cool Game Name (1990)(Developer)(Disk 2 of 3 Side A)(Dungeon).d64|Dungeon
Cool Game Name (1990)(Developer)(Disk 2 of 3 Side B)(Populace
A).d64|Populace A
Cool Game Name (1990)(Developer)(Disk 3 of 3 Side A)(Populace
B).d64|Populace B
Cool Game Name (1990)(Developer)(Disk 3 of 3 Side B)(Populace
C).d64|Populace C
```

...will be shown in RetroArch's disk selection menu as:

```
1: Game
2: Surface
3: Dungeon
4: Populace A
5: Populace B
6: Populace C
```

Save Disks

Some games require you to supply your own empty disk for saving games. This requires an .m3u file. On the first line(s) you should point out to the program which does not need to be a disk but can be any supported file type (so you can use Save Disks also with PRGs or cartridges and even tapes). The last line in the .m3u should be:

```
#SAVEDISK:
```

Although one save disk is normally sufficient, an arbitrary number of #SAVEDISK:VolumeName lines

may be included. Save disks are located in the save directory, with the following name:
[M3U_FILE_NAME] . save [DISK_INDEX] . d64.

Save disks generated by the #SAVEDISK: keyword are automatically assigned the label: Save Disk [SAVE_DISK_INDEX] in the list of disks.

Remember to switch to the Save Disk after starting your game, either via [H0TKEY] + [L1] or the RetroArch menus.

Video Modes

The C64 has several specialities regarding its various video modes. While the default options will work in many cases, for some games you might need to change specific options.

PAL vs. NTSC

The C64 behaves differently on PAL or NTSC systems and some games need to be set to the correct video mode if you experience screen flickering or crashes. Also most games are locked to the screen refresh so that they run 20% faster on NTSC settings (60 fps) than on PAL settings (50 fps).

PAL games run in 50 Hz while sometimes your Batocera machine will output 60 Hz (especially Laptops). This will result in stuttering every 10th of a second. If your Batocera machine and monitor can switch to 50 Hz output you will see smooth scrolling. On a 60 Hz locked host machine you can switch the emulated C64 to NTSC instead for smooth scrolling, but this will speed up gameplay by 20% in most cases and can crash some games.

The default setting for LIBRETRO: VICE X64 is to run the game in **C64 PAL AUTOMATIC** mode, as most games of the C64 library were written for PAL systems. You can change this default behaviour in the **ADVANCED SYSTEM SETTINGS** for C64. Recommended is to use one of the three automatic modes, as these allow switching for specific games by filename. You can also change this individually for specific games in the **ADVANCED GAME OPTIONS**.


If the path or filename of the game contains one of the following strings: NTSC, (USA), (Japan), (Japan, USA) the machine will be set to NTSC when it is in Auto PAL. If the path or filename of the game contains one of the following strings: PAL, (Europe), (Finland), (France), (Germany), (Netherlands), (Sweden) the machine will be set to PAL when it is in Auto NTSC.

PAL and NTSC machines also had different aspect ratios, with NTSC being more “quadratic” and PAL being more horizontally stretched. If the game you are playing looks either squashed or stretched, you can simply change the Aspect Ratio in Emulation Station either per game or for the full system.

Border Graphics and Zoom Mode

While the C64 officially has a screen resolution of 200 lines, in reality the video chip draws the equivalent of 288 lines (for PAL) - 200 lines of image (interlaced) and 88 extra lines above and below that image. Some these are never visible due to overscan, but on a real C64 you always have a large visible border on the display. Officially this border can only be set to one of the 16 colors of the C64

palette, so the default setting of LIBRETRO: VICE X64 is to moderately zoom into the screen so that only part of the border is visible. With this setting you can still see border palette changes like loading or decrunching bars.

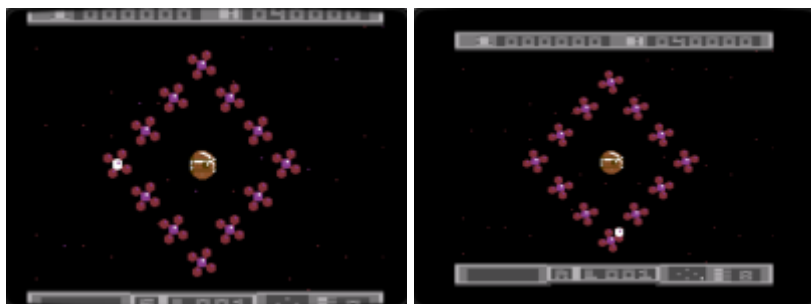

Left: Zoom active, border graphics cut off. **Right:** Zoom deactivated.

With programming tricks this border area can be used to display graphics, extending the screen for example for score displays and life counters. These would appear cut off with the default settings. This requires you to turn off the zoom so that you can see the full graphics. You can achieve this by either pushing [R3] or setting the **ZOOM MODE** in the **ADVANCED GAME OPTIONS** for a specific game.

Color Palettes

The C64 colors always were displayed very differently on the different monitors available in the late 80s. LIBRETRO: VICE X64 usually picks a palette equivalent to common PAL or NTSC displays based on the video mode. You can override these palettes and choose a different one. Emulation Station provides 16 different options that you can set in the **ADVANCED SYSTEM OPTIONS** (for all games) and **ADVANCED GAME OPTIONS** (for individual overrides).

Emulators

There are four emulators included for the C64 group. The default is LIBRETRO: VICE X64 which is preferred due to better configuration via Emulation Station and some more display options. For standard users it is highly recommended to stick to this emulator as it also supports features like Decorations and Netplay.

There are three supplementary standalone variants: VICE: X64, VICE: X64DTV and VICE: XSCPU64. The first one, X64, emulates a standard C64. The X64DTV is for the C64DTV [C64_Direct-to-TV](#) which has more graphical capabilities, but does not have many specific games. The XSCPU64 emulates a modified C64 [SuperCPU](#) with a 20 MHz CPU and 16 MB of RAM instead of the standard 1 MHz CPU and 64 KB of RAM. It usually requires modified software.

RetroArch

[RetroArch](#) (formerly SSNES), is a ubiquitous frontend that can run multiple “cores”, which are essentially the emulators themselves. The most common cores use the [libretro](#) API, so that's why cores run in RetroArch in Batocera are referred to as “libretro/(core name)”. RetroArch aims to unify

the feature set of all libretro cores and offer a universal, familiar interface independent of platform.

RetroArch configuration

RetroArch offers a **Quick Menu** accessed by pressing [H0TKEY] +  which can be used to alter various things like [RetroArch and core options](#), and [controller mapping](#). Most RetroArch related settings can be altered from Batocera's EmulationStation.

Standardized features available to all libretro cores: c64.videomode, c64.ratio, c64.smooth, c64.shaders, c64.pixel_perfect, c64.decoration, c64.game_translation

ES setting name batocera.conf key	Description » ES option key value
MODEL TYPE c64.c64_model	Automatically switches region per file path tags (see PAL vs NTSC above) » C64 PAL Automatic C64 PAL auto, C64 NTSC Automatic C64 NTSC auto, C64 PAL C64 PAL, C64 NTSC C64 NTSC, C64 Games System PAL C64 GS PAL, C64 Japanese NTSC C64 JAP NTSC.
EXTERNAL PALETTE c64.external_palette	Choose your color palette » default default, colodore colodore, pepto-pal pepto-pal, pepto-ntsc pepto-ntsc, pepto-ntsc-sony pepto-ntsc-sony, cjam cjam, c64hq c64hq, c64s c64s, ccs64 ccs64, community-colors community-colors, deekay deekay, frodo frodo, godot godot, pc64 pc64, ptoing ptoing, rgb rgb, vice vice.
ASPECT RATIO c64.aspect_ratio	Switches the aspect ratio (but not refresh rate or model) » PAL 50Hz - 312/576px pal, NTSC 60Hz - 262/492px ntsc.
ZOOM MODE c64.zoom_mode_c64	Crops the borders to show or hide border graphics » Off none, small small, medium medium, maximum maximum.
CONTROLLER PORT c64.vice_joyport	Most games use port 2, some use port 1 » Port 1 1, Port 2 2.
CONTROLLER TYPE c64.vice_joyport_type	Choose what type of controller to use » Joystick 1, Paddles 2, Mouse (1351) 3, Trackball (Atari CX-22) 6, Koalapad 10.
KEYBOARD PASS-THROUGH c64.keyboard_pass_through	Passes all physical keyboard events for Pad2Key » Off disabled, On enabled.
GRAPHICS BACKEND c64.gfxbackend	Choose your graphics rendering » OpenGL opengl, Vulkan vulkan.
AUDIO LATENCY c64.audio_latency	Audio latency in milliseconds, turn it up if you hear crackles » 256 256, 192 192, 128 128, 64 64, 32 32, 16 16, 8 8.

Standalone VICE

The three standalone versions basically use the same emulator engine as the RetroArch version, but

expose a lot more of the internal features (like switching Soundchip emulation) in their own UI (and not in Emulation Station). They are recommended only if you need access to these features. The full documentation for these emulators is available on [SourceForge \(Vice-Emu\)](#).

vice/x64

vice/x64dtv

vice/xscpu64

Standardized features available to all cores of this emulator: `c64.videomode`, `c64.ratio`, `c64.padtokeyboard`

ES setting name	batocera.conf key	Description » ES option key	value
ZOOM (HIDE BORDERS)	c64.noborder	Display only 200 scanlines, effectively removing borders on many games\\ » NO (DEFAULT) 0, YES 1.	

The following detailed description only applies to Batocera **V33** and above. While earlier versions fully support the C64 library, advanced settings in Emulation Station are not available and the controls have been changed to be more accessible. The overall references to file types, BIOS and directories apply to earlier Batocera versions if they have a `roms/c64/` directory.

Controls

The C64 has two joystick ports and every joystick only has four digital directions and one fire button. The C64 also has a keyboard that is extensively used in many games. The controller mapping has been optimized to cover most use cases for known C64 games, but there will be limitations. There also is a virtual keyboard available for those keys that are not mapped.



Control scheme for **LIBRETRO: VICE X64**

Controller Mapping

Retropad	LIBRETRO: VICE X64	VICE: X64
D-Pad	Joystick directions	Joystick directions
Left Stick	Joystick directions	Joystick directions
	Joystick Fire	Joystick Fire
	Space (keyboard)	Space (keyboard)
	Y (keyboard)	Y (keyboard)

Retropad	LIBRETRO: VICE X64	VICE: X64
	N (keyboard)	N (keyboard)
[Select]	Short press: Virtual keyboard Longer press: Statusbar on/off Even longer press: Fast Forward	Virtual Keyboard
[Start]	Return (keyboard)	VICE Main Menu
[L1]	Run/Stop (keyboard)	Run/Stop (keyboard)
[R1]	Restore (keyboard) - see below!	Return (keyboard)
[L2]	Warp mode (keep pressed)	
[R2]	Shift key	
[L3]	Switch Joystick ports	
[R3]	Zoom on/off	
[HOTKEY] + [L2]	Switch disk (.m3u required)	
[HOTKEY] + [R2]	Switch disk (.m3u required)	
Right Thumbstick	F Keys (keyboard) Up: F1 Left: F3 Right: F5 Down: F7	

Notes

Joystick Ports

The C64 has two Joystick Ports named #1 and #2. Unfortunately for technical reasons most games use Port #2 as the standard port for Player Number 1. So the Player 1 controller by default is mapped to Port #2. To switch controller ports (map Player 1 to Port #1) you can:

- Press [L3] to switch ports - this setting is NOT saved per game
- Add a J1 to the filename / filepath of the game (you can also specify J2 in the filename if you have switched defaults to Port #1)
- Set the **CONTROLLER PORT** in the **ADVANCED GAME OPTIONS** for a specific game (this overrides filename settings)

Controller Type

Besides Joysticks LIBRETRO: VICE X64 also supports the emulation of C64 mice, paddles and the Koalapad. These are autoconfigured on the left thumbstick. To change the Controller Type, set **CONTROLLER TYPE** in the **ADVANCED GAME OPTIONS**

Special C64 keys

A lot of early C64 games use the four function keys on the right side of the keyboard for selections of number of players and play modes (please check the respective game manuals). These keys have been mapped to the right thumbstick. Moving it up presses the F1 key, left is F3, right is F5, down is F7. There are no even numbered F-keys, F2 is Shift-F1, F4 is Shift-F3 and so forth.

The C64 has a Shift Lock key that is not emulated as it is a mechanical key. You need to keep Shift pressed. Shift is mapped to [R2].

The C64 has a key called Restore that actually triggers a NMI (Non Maskable Interrupt). That is used a some kind of soft reset in some situations, especially when pressed together with the Run/Stop key. This might be needed for some cartridge games.

Special emulation keys

The controller has been mapped with some specific quality-of-life functions in LIBRETRO: VICE X64.

The [Select] Button has three functions:

- Pushing it once shortly will show/hide a virtual keyboard.
- Pushing it a little bit longer will show/hide a status bar.
- Pushing it even longer will start the Fast Forward, speeding up the emulation (not as fast as Warp but internally rendering every frame).


Pulling [L2] will “warp” the emulation. This runs the CPU emulation at maximum speed and skips frames. This can greatly reduce wait times during loading and/or decrunching.

Pushing [L3] will switch the controller between Port #1 and Port #2.

Pushing [R3] will switch the Zoom function on and off to see more or less of the border. (For the standalone emulators this will get you to the main VICE menu).

Using [L2] and [R2] together with the [H0TKEY] will switch disks from an .m3u playlist (see Multi Disk above).

Virtual Keyboard

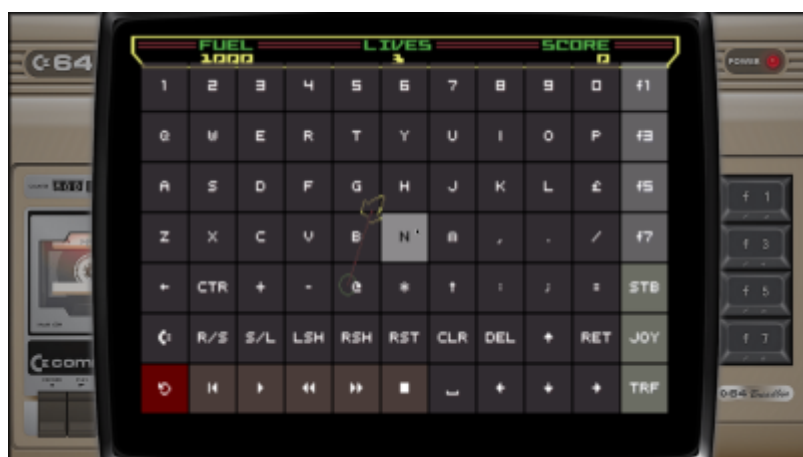

Pressing [Select] will bring up a virtual keyboard to enter keys that are not mapped to the controller. In LIBRETRO: VICE X64 this virtual keyboard has the following extra options:

[STB] - Turns a statusbar on or off

[JOY] - Switches Joystick Ports 1 and 2

[TRF] - Switches Turbo Fire for the Joystick on or off

Red Button in lower left corner - Keep pushed for Reset

Brown Buttons in lower line - Tape controls for Multi-Load Tape Games

Status Bar



A medium length (1/2 second) press of [SELECT] turns a specific status bar on or off (only in LIBRETRO: VICE X64). The information provided is (from left to right):

- Joystick activity and port switches
- Current Screen resolution
- Current emulated machine
- Green: Current Track position of 1541 drive
- Red: Current frame rate

From:

<https://www.wiki.batocera.org/> - **Batocera.linux - Wiki**

Permanent link:

<https://www.wiki.batocera.org/systems:c64?rev=1637837149>

Last update: **2021/11/25 10:45**

